



# Garmin nuviCam LMTHD Screen Replacement

Replacing the screen of your Garmin nuviCam LMTHD.

Written By: Sarah Myers






## TOOLS:


- [T6 Torx Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Screen

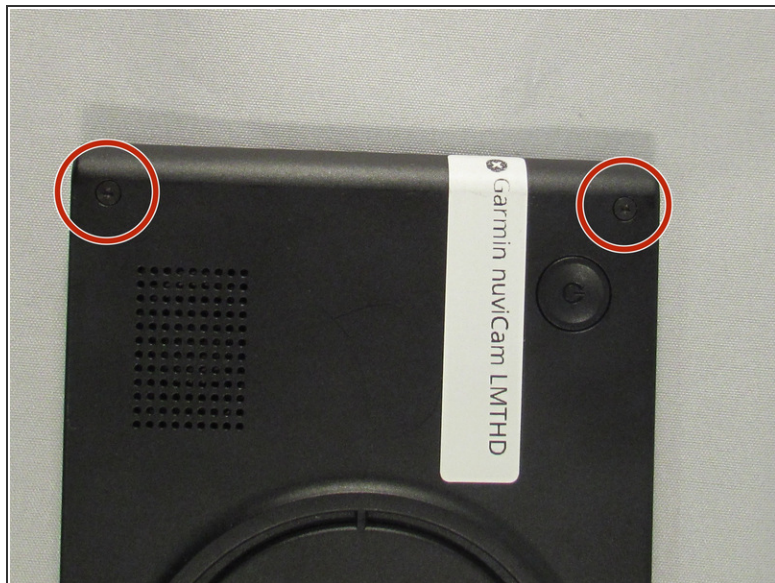

- Remove the four 6.9 mm black screws using the T6 screw bit.

## Step 2

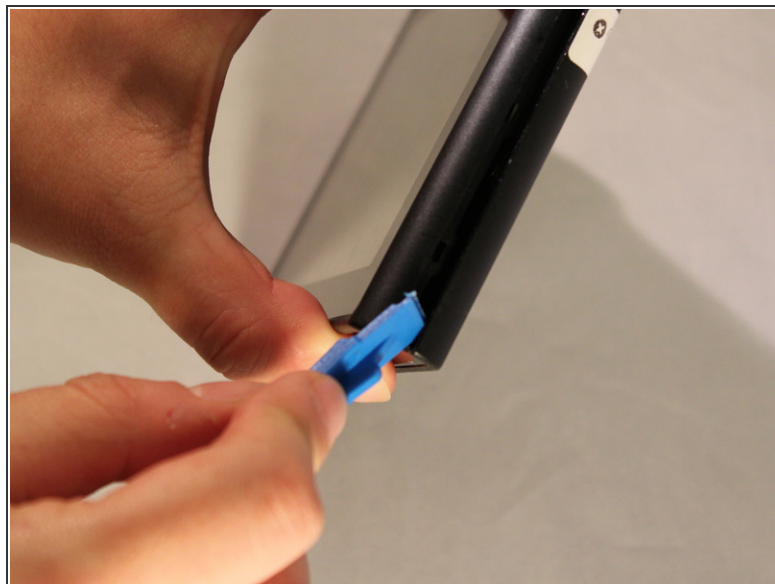

- Pry the device open using a plastic opening tool.
- We suggest starting from the dash camera side for easier opening
- ⓘ You may have to use a little force, the screen is hard to remove.





## Step 3



- Disconnect the black and red wire from the screen.

## Step 4

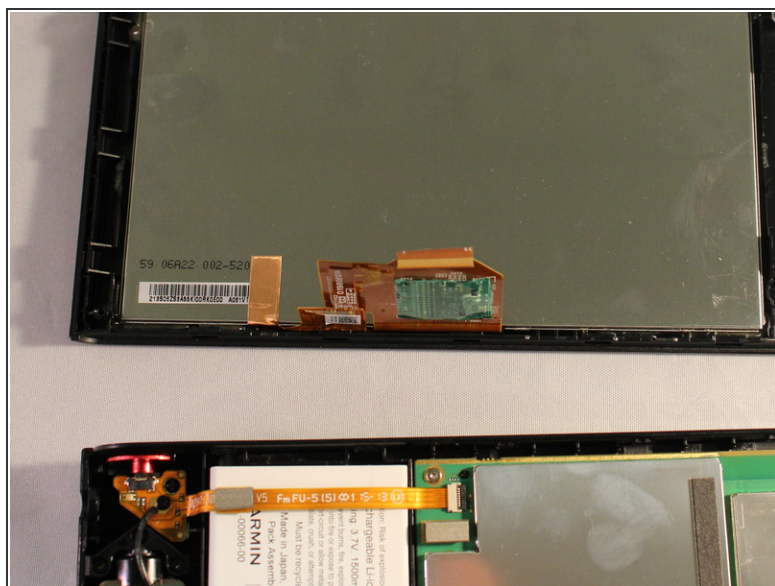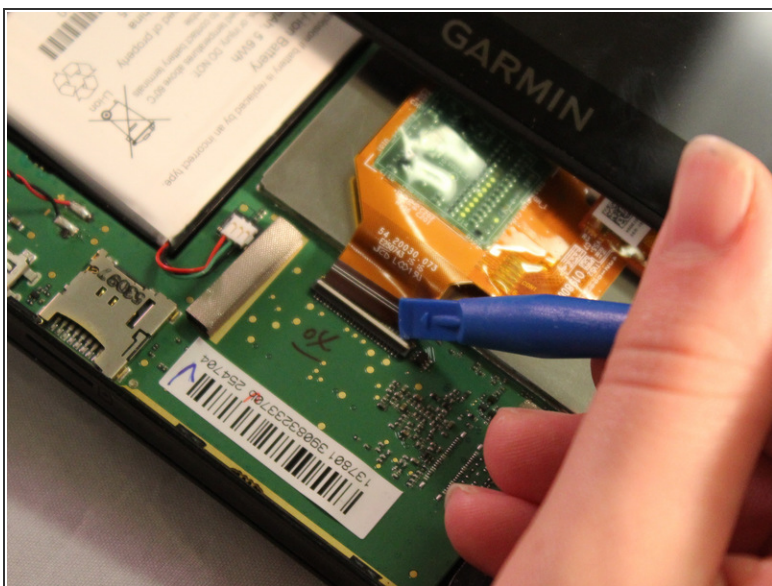

- Disconnect the orange strip by flipping up the connector with a plastic opening tool and sliding the cable out.

To reassemble your device, follow these instructions in reverse order.

